AMPROBE®

Data Sheet





BT-120 Breaker tracers

The Amprobe breaker finders work on energized systems and are designed to quickly and easily indentify breakers in residential and commercial environments. Automatic sensitivity adjustment removes ambiguity from the results of the tracing, and the receiver will clearly and quickly identify the breaker with sound and light.

- Used to identify circuit breakers
- Automatic sensitivity adjustment is easier to use and faster than the manual one
- Microprocessor controlled design provides extremely accurate readings (always finds the right breaker)
- **■** Durable and dependable
- BT-120 works with standard 120V breakers
- **UL Listed**

No hassle warranty

No waiting.





"No Hassle" warranty. In the unlikely event that an Amprobe Test Tool requires warranty service, any of our local dealers are authorized to replace

(note: \$500 MSLP limit)

it, on the spot.





BT-120 Breaker tracers Data Sheet

Specifications

Voltage Range	90 to 120V
Operating Frequency	50 - 60 Hetz
Storage Temperature	0-40 Degrees C
Operating Temperature	0-40 Degrees C
Sensitivity Adjustment	Automatic
Power Supply	9-Volt Alkaline Battery (Receiver Only)
Transmitter Polarity	Automatic
Humidity	80% RH (non condensing)
Environmental Conditions	For Indoor use, For Altitudes up to 2000 m, Pollution Degree 2
Installation Category II	
Caution	HTP-HVL cord assembly to be used with Circuit Detective Transmitter only according to instructions

Included Accessories

Users Manual

Amprobe® Test Tools

website: www.Amprobe.com email: info@amprobe.com

Everett, WA 98203 Tel: 877-AMPROBE

Amprobe® Test Tools Europe

In den Engematten 14 79286 Glottertal, Germany Tel.: +49 (0) 7684 8009 - 0

©2009 Amprobe Test Tools. All rights reserved. 12/2009 3520354 Rev A