



## **Instruction Manual**

---

**Model 1823A    2.4 GHz Universal Frequency Counter**

## Introduction

Thank you for purchasing our product. Electronic measuring instruments produced by us are high technology products made under strict quality control. We guarantee their exceptional precision and utmost reliability. For proper use of the product, please read this operation manual carefully.

### Note

1. To fully maintain the precision and reliability of the product use it within the range of standard setting (temperature 10 °C~35 °C, humidity 45%~85%)
2. After turning of power, please allow a pre-heating period of as long as some 30 minutes before use.
3. This equipment should be used with a triple line power cord for safety.
4. For quality improvement the exterior design and specification of the product can be changed without prior notice.
5. If you have further questions concerning use, please contact our service center or sales outlet.

### Safety Summary

Please take a moment to read these operating instructions thoroughly and completely before operating this instrument. Pay particular attention to WARNINGS used for conditions and actions that pose hazard to the user and CAUTIONS used for conditions and actions that may damage the instrument.

- Always to inspect the instrument and other accessories for any sign of damage or abnormality before every use.
- Never ground yourself and keep your body isolated from ground.
- Never touch exposed wiring, connections or any live circuit conductors.
- Do not install substitute parts or perform any unauthorized modification to the instrument.
- Use caution when working above 60V DC or 30V AC rms. Such voltages pose a shock hazard.
- Remember that line voltage is present on some power input circuit points such as on-off switches, fuse, power transformers, etc., even when the equipment is turn off.
- Also, remember that high voltage may appear at unexpected points in defective equipment.

### Safety Symbols

	DANGEROUS VOLTAGE		SEE EXPLANATION IN MANUAL
	AC-ALTERNATING CURRENT		GROUND
	DC-DIRECT CURRENT		FUSE

## CONTENTS

### 1. PRODUCT DESCRIPTION

1-1. Introduction .....	( 4 )
1-2. Technical Specifications .....	( 5 )
1-3. Equipment Ratings .....	( 8 )
1-4. Supplied Accessories .....	( 8 )

### 2. INSTALLATION

2-1. Initial Inspection .....	( 9 )
2-2. Connecting AC Power .....	( 9 )
2-3. Cooling and Ventilation .....	( 9 )
2-4. Position .....	( 9 )
2-5. Warming-Up .....	( 9 )

### 3. OPERATION

3-1. Controls, indicators and connectors .....	(11)
3-2. Operating instruction .....	(14)
3-3. Frequency Measurements .....	(14)
3-4. Period Measurements .....	(15)
3-5. Total Measurements .....	(15)
3-6. Time interval measurement(A-B).....	(16)
3-7. Ratio Measurement (A/B).....	(17)
3-8. Use of RS-232C Serial Interfacing.....	(18)

### 4. MAINTENANCE

4-1. Fuse Replacement .....	(19)
4-2. Adjustment and Calibration .....	(19)
4-3. Cleaning and decontamination .....	(19)

### 5. OTHERS

5-1. BNC Cable Considerations .....	(20)
5-2. Use of Attenuator probes .....	(20)
5-3. Line Frequency Measurements .....	(21)

# 1. PRODUCT DESCRIPTION

## 1-1. Introduction

This reciprocal UNIVERSAL COUNTER series are microprocessor controlled instruments for frequency measurements at high resolutions within a short period of time. The high resolution is due to uniquely developed LSI as well as the expanding/reciprocal systems. It covers a frequency range from 0.1 Hz to 2.4 GHz based on 10 MHz time base T.C.O (temperature controlled oscillator) and also featuring,

- Trigger Function
- Time Interval Measurement Function
- Frequency Ratio Measurement Function
- Common or Separate Input Selection
- External Frequency Standard Input with 9 Digits LED Display
- Attenuator
- Check
- Period
- Total
- Low Pass Filter
- Line Filter

A self-test mode is also provided for a quick check of several facets of operation. Each operating mode can be selected by front panel push button switches with automatic decimal points and indicators. The high accuracy, sensitivity and versatility of this counter makes it an extremely valuable instrument to scientists, engineers, experimenters and communications technicians. Light weight and compact size make it practical for use by the hobbyist or field technicians.

## 1-2. Technical Specifications

### ■ INPUT A CHARACTERISTICS

- FREQUENCY RANGE : 0.1 Hz to 100 MHz (DC Coupled)  
30 Hz to 100 MHz (AC Coupled)
- SENSITIVITY : 0.1 Hz to 1 Hz: 250 mV  
1 Hz to 100 MHz: 30 mV
- COUPLING : AC or DC Selectable
- IMPEDANCE : 1 M $\Omega$  Resistance, Shunted by < 40 pF
- ATTENUATOR : x 1 or x 10 Switch Selectable
- LOW PASS FILTER : -3 dB Point of 100 kHz, Switch Selectable
- TRIGGER LEVEL : + 350 mV to – 350 mV (PRESET 0 V)
- SLOPE : Positive or Negative Slope Switch Selectable

\* NOTE: Trigger error is typically  $\pm 0.3$  % of reading by the number of cycles averaged for input signals having better than 40 dB S/N ratio and greater than 100 mV amplitude.

### • RESOLUTION AND NUMBER OF DISPLAYED DIGIT

Time Base Selector	INT	EXT	INT	EXT	INT	EXT	INT	EXT
Gate Time	0.01 S		0.1 S		1 S		10 S	
Number Of Displayed Digit	5	6	6	7	7	8	8	9
Frequency (Input A,B)	RESOLUTION							
0.1 Hz-0.99 Hz	10 uHz	1 uHz	1 uHz	0.1 uHz	0.1 uHz	10 nHz	10 nHz	1 nHz
1 Hz-9.9 Hz	0.1 mHz	10 uHz	10 uHz	1 uHz	1 uHz	0.1 uHz	0.1 uHz	10 nHz
10 Hz-99 Hz	1 mHz	0.1 mHz	0.1 mHz	10 uHz	10 uHz	1 uHz	1 uHz	0.1 uHz
100 Hz-999 Hz	10 mHz	1 mHz	1 mHz	0.1 mHz	0.1 mHz	10 uHz	10 uHz	1 uHz
1 kHz-9.9 kHz	0.1 Hz	10 mHz	10 mHz	1 mHz	1 mHz	0.1 mHz	0.1 mHz	10 uHz
10 kHz-99 kHz	1 Hz	0.1 Hz	0.1 Hz	10 mHz	10 mHz	1 mHz	1 mHz	0.1 mHz
100 kHz-999 KHz	10 Hz	1 Hz	1 Hz	0.1 Hz	0.1 Hz	10 mHz	10 mHz	1 mHz
1 MHz-9.9 MHz	100 Hz	10 Hz	10 Hz	1 Hz	1 Hz	0.1 Hz	0.1 Hz	10 mHz
10 MHz-99 MHz	1 KHz	100 Hz	100 Hz	10 Hz	10 Hz	1 Hz	1 Hz	0.1 Hz
100 MHz	10 KHz	1 KHz	1 KHz	100 Hz	100 Hz	10 Hz	10 Hz	1 Hz

- ACCURACY :  
0.1Hz to 100 Hz :  $\pm$  Time base error  $\pm$  resolution  $\pm$  1 count  
101Hz to 100MHz:  $\pm$  Time base Error  $\pm$  1 count  $\pm$  (Resolution Table 1 x 20)
- PERIOD RANGE : 10 nS to 10 S
- DISPLAY : n. u. m., Sec with decimal point
- TOTAL RANGE : DC to 30 MHz  
CAPACITY : 0 to 999 999 999  
OVER FLOW : "OF"

- MAX. INPUT VOLTAGE LEVEL

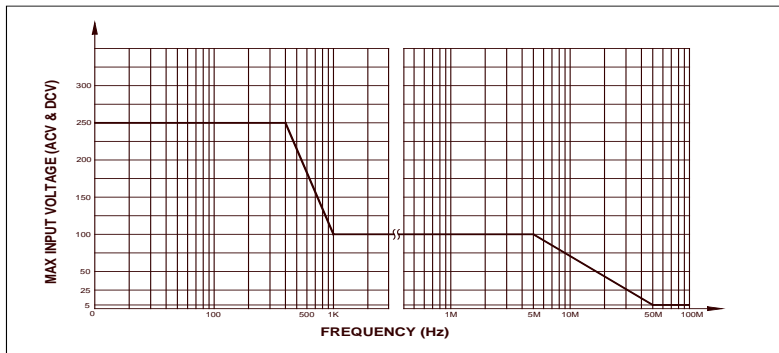


FIG 1. MAX. Input Level. (Input A,B)

- INPUT B. CHARACTERISTICS = Same as Input A

- TIME INTERVAL(A→B)

- RANGE : 0.1 uSec-10 Sec(0.1 Hz-10 MHz)
- LSD : 100 nSec
- RESOLUTION :  $\pm \text{LSD} \pm \text{Trigger Error}^*$
- ACCURACY :  $\pm \text{LSD} \pm \text{Trigger Error} \pm \text{Time base error} \times \text{T.I}$
- MULTIPLIER : 1,10,100,1000 (Gate Time: 10 S,1 S,0.1 S,0.01 S)

- RATIO(A/B)

- RANGE : 0.1 Hz to 10 MHz(input A)  
: 0.1 Hz to 10 MHz(input B)
- RESOLUTION :  $\pm \text{LSD} \pm (\text{B Trlg. ERROR} \times \text{FREQ. A})/N$
- ACCURACY :  $\pm 1 \text{ COUNT of A} \pm \text{B TRIG. ERROR} \times \text{FREQ. A.}$

## ■ INPUT C. CHARACTERISTICS

- FREQUENCY RANGE: 80 MHz to 2.4 GHz
- SENSITIVITY: 25 mV from 80 MHz to 150 MHz  
20 mV from 150 MHz to 2.0 GHz  
60 mV from 2.0 GHz to 2.4 GHz
- COUPLING : AC only
- IMPEDANCE : 50  $\Omega$   $\pm$ 5%
- MAX. INPUT LEVEL : 3 Vrms sine wave

### • RESOLUTION AND NUMBER OF DISPLAYED DIGIT

Time Base Selector	INT	EXT	INT	EXT	INT	EXT	INT	EXT
Gate Time	0.01 S		0.1 S		1 S		10 S	
Number Of Displayed Digit	5	6	6	7	7	8	8	9
Frequency (Input C)	RESOLUTION							
80 MHz-99 MHz	1 KHz	100 Hz	100 Hz	10 Hz	10 Hz	1 Hz	1 Hz	0.1 Hz
100 MHz-999 MHz	10 KHz	1 KHz	1 KHz	100 Hz	100 Hz	10 Hz	10 Hz	1 Hz
1 GHz-2.4GHz	100 KHz	10 KHz	10 KHz	1 KHz	1 KHz	100 Hz	100 Hz	10 Hz

(Table 2)

## ■ TIME BASE CHARACTERISTICS

- TYPE : TCO (Temperature controlled oscillator)
- FREQUENCY : 10.000000 MHz
- STABILITY :  $\pm$ 1 PPM( $\pm$ 1 count)
- LINE VOLTAGE STABILITY : Less than  $\pm$  1 PPM with  $\pm$  10% line voltage variation.
- TEMPERATURE STABILITY :  $\pm$ 5 PPM from 0°C to 50°C
- MAX. AGING RATE :  $\pm$ 5 PPM/year
- INT. STD. OUT : 10 MHz(internal standard frequency output)
- LEVEL : 1 Vpp or more.
- IMPEDANCE : Approx. 600  $\Omega$
- EXT. STD. IN : 10 MHz (external standard frequency input)
- LEVEL : 1.5 Vrms to 5 Vrms
- IMPEDANCE : Approx. 600  $\Omega$

## ■ DISPLAY CHARACTERISTICS

- DISPLAY : Nine Digit 0.56" LED with M/n, K/u, Hz, m, Sec, G.T, Hold, and "OF" indicators. Function and Gate time: User Selected.  
"OF" Display Shown When Count exceeds 999 999 999
- HOLD : In Frequency and Period, TOTAL. Mode measurement in progress is stopped, and the last complete measurement is

displayed. When Hold is released, a new measurement begins.

- GATE TIME : Depending on input frequency
  - < 10 mS-----Somewhere between 0.9 and 9 mS
  - < 0.1 S-----Somewhere between 9 and 90 mS
  - < 1 S-----Somewhere between 90 and 900 mS
  - < 10 S-----Somewhere between 0.9 and 9 S

**NOTE:**  
**LAST MEASUREMENT DISPLAY WILL REMAIN FOR 10 SECONDS AFTER SIGNAL OFF.**

#### ■ DIMENSION AND WEIGHT

- Dimensions WHD: 3.4 x 3.5 x 10.6 in (240 x 90 x 270 mm)
- Weight : Approx. 5.5 lb (2.5 kg.)

#### 1-3. Equipment Ratings

- Plug and Socket : 3 wire AC power plug and 3 wire outlet
- Power & Fuse Ratings

Input Voltage	Fuse	Power Max.
103 ~ 126V AC (50/60Hz)	F 0.5A / 250 V	15 W
206 ~ 252V AC (50/60Hz)	F 0.2A / 250 V	

- Operating Environment:
  - TEMPERATURE: 0 °C to + 40 °C (Accuracy Specified at 23 °C ± 5 °C)
  - HUMIDITY: up to 85% RH (Relative Humidity) to 40 °C without temperature extremes causing condensation within the instrument.
- Storage Environment:
  - TEMPERATURE: -20°C to +70°C
  - HUMIDITY: below 85% RH
- Insulation Category II: Portable equipment of local level.
- Pollution Degree: 2
- Protection to IEC 529: Ordinary

**Note: Specifications are subject to change without notice. Please visit [www.bkprecision.com](http://www.bkprecision.com) for the most current product information.**

#### 1-4. Supplied Accessories

- User's Manual -----1
- BNC cable -----1



- Power cord-----1
- Spare Fuse-----1

## 2. INSTALLATION

### 2-1. Initial Inspection

This instrument was carefully inspected both mechanically and electrically before shipment. It should be physically free of damage. To confirm this, the instrument should be inspected for physical damage in transit. Also, check for supplied accessories.

### 2-2. Connecting AC Power

#### 2-2. Connecting AC Power

This instrument requires 115V AC or 230V AC (50-60 Hz) power socket with protective earth contact (PE-contact). If it is available only a power socket without PE-contact (so a 2-conductor ac power) then a power socket with PE-contact must be installed before or the appliance should be provided with a PE-screw-terminal which is not soluble by hand and not soluble before 2-conductor power lines.

#### **CAUTION**

**AC POWER OF THIS INSTRUMENT IS PRESET TO 115 V IN FACTORY. BEFORE POWERING ON THIS INSTRUMENT, CHECK AND MAKE SURE THE VOLTAGE OF THE POWER SOURCE IS SAME WITH THE MARKING OF UNIT.**

**IN CASE OF AC230 V, VOLTAGE SELECTOR (on rear panel) SHOULD BE SELECTED TO 230 V POSITION.**

### 2-3. Cooling and Ventilation

No special cooling and ventilation is required. However, the instrument should be operated where the ambient temperature is maintained.

### 2-4. Position


This instrument is built as a bench-type instrument with rubber feet and tilt stand in place. Stand-up angle can be adjusted by rotating angle of carrying handle.

### 2-5. Warming-Up

Allow more than 30 minutes for the unit to warm up so that it is stabilized and ready for use.

### 3. OPERATION

#### 3-1. Controls, indicators and connectors

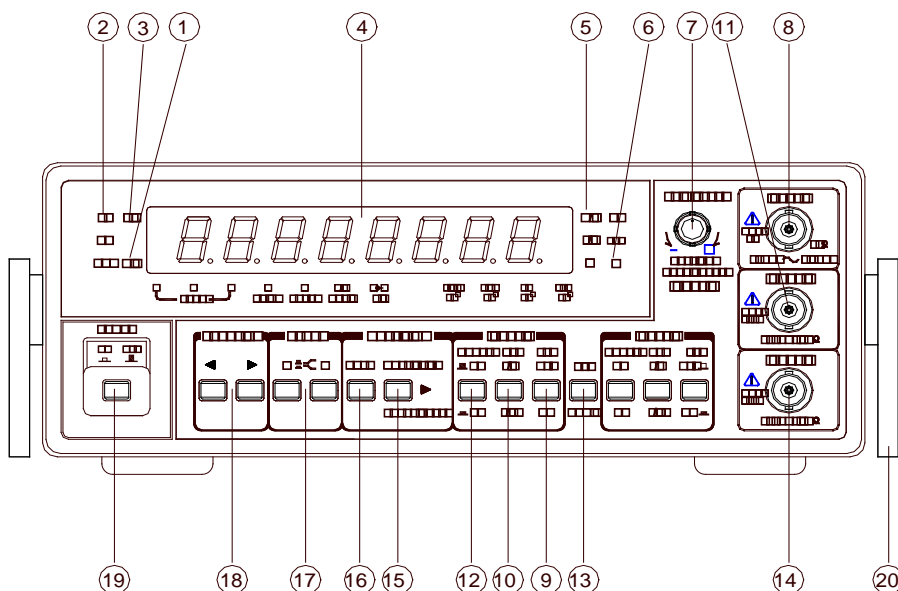

FIG(2) FRONT PANEL

- ① GATE INDICATOR : The gate light, when lit, indicates the main gate is open and measurement in progress.
- ② RS-232C INDICATOR: TX(transmitting), RX(receiving) blinking(OPTION)
- ③ OVER FLOW INDICATOR : OF is displayed when overflow.
- ④ DISPLAY : 9 digit(0.56") green LED display used for all read readings.

NOTE: LAST MEASUREMENT DISPLAY WILL REMAIN FOR 10 SECONDS AFTER SIGNAL OFF.

- ⑤ UNIT INDICATOR : When lit, indicates that the frequency displayed is in KHz or MHz, and period is in n, u or mSec.
- ⑥ HOLD INDICATOR : When lit, engaged the hold function.
- ⑦ TRIG. LEVEL VR : Adjusts trigger threshold level on the input A input signal. Pushing the knob in (preset) sets this level at the mid-point of a symmetrical sinewave input. Pulling

the knob out and rotating it varies the level from negative to positive around the mid point.

- ⑧ INPUT C, BNC : Input for frequency measurements above 80 MHz  
Female BNC connector terminated in 50  $\Omega$ .
- ⑨ LOW PASS FILTER : With this switch pushed in, the input B is routed through a SWITCH(LPF) low-pass filter with -3 dB point of approximately 100 kHz. When it is released, the input B signal is applied to the counter. Same as input B function for input A.
- ⑩ ATT. SWITCH : When this switch is set to x 10 (pushed in) the input B is attenuated 10 :1 before application to the counter with the switch set to x 1 (pushed out), the input B signal is applied.  
The attenuator has no effect on the input C.
- ⑪ INPUT B, BNC : Input for frequency measurements below 100 MHz  
Female BNC connector terminated in 1 M  $\Omega$  input resistance, shunted by < 40 pF capacitance.
- ⑫ COUPLE. SWITCH : The switch is used to select the input-coupling mode AC or DC.
- ⑬ COM/SEP. : COM. or SEPARATION for INPUT A,B
- ⑭ INPUT A, BNC : Input for frequency measurements below 100 MHz.  
Female BNC connector terminated in 1 M $\Omega$  input resistance, Shunted by < 40 pF capacitance.
- ⑮ GATE TIME SWITCH : This switch selects the degree of resolution of the display in all modes except TOTAL.
- ⑯ HOLD SWITCH : In hold function the display held but the counters continue to increment. When the hold is released, the display is updated and resumes counting.
- ⑰ SLOPE SWITCH : Selects positive going or negative going edge of input A, B signal for triggering. When pushed in, negative going edge is selected; when pushed out, positive going edge is selected.
- ⑱ FUNCTION SWITCH : Select the desired operating mode.
  - a. FREQ. A. When this mode is selected, the counter reads the frequency of the input A.  
Resolution is selected using the GATE TIME.
  - b. FREQ. B. When this mode is selected, the counter reads the frequency of the input B. Resolution is selected using the GATE TIME.
  - c. FREQ. C: When this mode is selected, the counter reads the frequency of the input C. All readings are in MHz.
  - d. PERIOD A. When this mode is selected, the counter read the period of the input A Resolution is selected using the GATE TIME.

- e. TOTAL A. When this mode is selected, the unit counts cycles of the input A signal and continuously displays that count.
- f. T.I (A→B). When this mode is selected, the unit measures the time interval from an edge of the input A signal to an edge of the input B signal. Positive going or Negative going edge of each signal is selected By the slope switches.
- g. RATIO (A/B). When this mode is selected, the unit measures the ratio of input A frequency to the input B frequency.

- ①⑨ POWER SWITCH : Push in the unit ON and push out the unit power OFF.
- ②⑩ TILT STAND : Pull out to adjust Tilt.

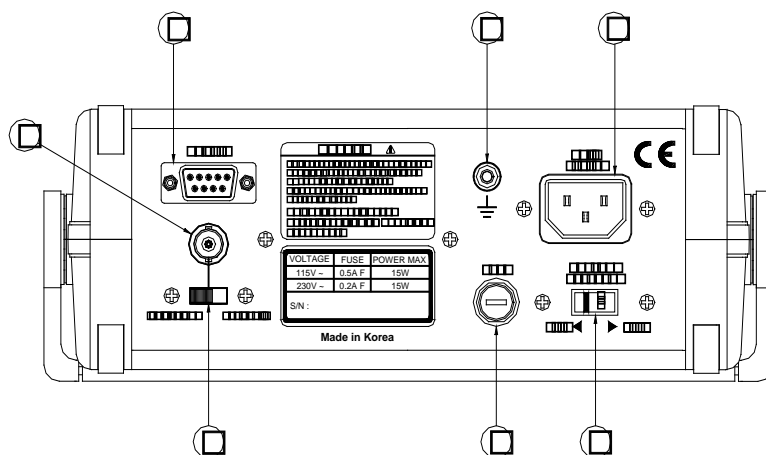


FIG (3) REAR PANEL

- ① AC INLET: AC power input connector
- ② VOLTAGE SELECTOR: Selects the AC Power (115 V or 230 V)
- ③ FUSE HOLDER: Replace fuse by unscrewing.
- ④ GROUND TERMINAL
- ⑤ INT/EXT TIME BASE SELECTOR:  
Selects the source of the time base. EXT.STD. IN sets up BNC ⑤ as a nominal 600  $\Omega$  input impedance path for an external 10 MHz time base signal. INT. STD. OUT sets up BNC ⑤ to monitor the internal time base signal.
- ⑥ INT/EXT TIME BASE BNC:  
Provides a connector through which the internal time base signal can be monitored or through which an external time base signal can be applied (see item ② above). The external signal should have a voltage range of 1.5 V~5 V rms.

- ⑦ RS-232C CONNECTOR: Connector for serial interfacing with a computer.

### 3-2. Operating Instruction

Below is the basic operating information needed for frequency counter.

- a. Connect the unit to AC power cord into receptacle on rear panel and plug into AC inlet.
- b. To Turn on equipment, push power on-off switch on.
- c. set the function indicator position to FREQ A and Gate time indicator to 1 Sec position.

#### **CAUTION**

**1. APPLICATION OF INPUT VOLTAGES HIGHER THAN THE LIMITS LISTED IN THE SPECIFICATIONS SECTION MAY DAMAGE THE COUNTER. BEFORE APPLYING ANY SIGNAL TO THE INPUTS, MAKE CERTAIN THAT IT DOES NOT EXCEED THESE SPECIFIED MAXIMUMS.**

**2. FREQUENCY COUNTER GROUND POINTS ARE CONNECTED DIRECTLY TO EARTH GROUND. ALWAYS CONNECT FREQUENCY COUNTER GROUND ONLY TO GROUND POINTS IN THE CIRCUIT UNDER TEST.**

### 3-3. Frequency Measurements

#### **3-3-1 INPUT A, B (0.1 Hz ~ 100 MHz)**

- a. Apply the signal to be measured to the input A and/or B BNC.
- b. Set the FREQ. A and/or B of function switch.
- c. Select the degree of resolution desired, using the gate time selector switch.
- d. Frequency is given by the display. The gate indicator lights while each measurement in progress, and the display is updated at the end of each measurement interval.
- e. Engaging the hold switch “freezes” the display at the existing reading, When hold is released, the display is updated and resumes counting.
- f. If necessary, engage the attenuator switch. When set to x 10 (pushed in), this switch attenuates the input A and/or B signal by a factor of approximately 10 before application to the counter. This helps prevent miscounting caused by noisy or improperly terminated high amplitude signals.
- g. If necessary, engage the LPF (low pass filter) switch This route the input A and/or B through a low pass filter (-3 dB point of approximately 100 KHz) before application to the frequency counter. This helps eliminate counting errors in low frequency measurements by minimizing effects of high frequency noise present on the input.
- h. When measurement the lower cut-off frequency (10 Hz), pushed in

DC coupling position.

### 3-3-2 INPUT C (80 MHz to 2.4 GHz)

#### **CAUTION**

**THE MAXIMUM INPUT LIMIT TO THIS INPUT IS 3 Vrms MAXIMUM OVER THE INPUT FREQUENCY RANGE. THE X 10 ATTENUATOR DOES NOT APPLY.**

- a. Apply the signal to be measured to the input C. BNC.
- b. Set the function indicator to the FREQ. C position.
- c. Select the degree of resolution desired, using the gate time switch.
- d. Frequency is given by the display. The indicator lights while each measurement in progress.
- e. Engaging the hold switch “freezes” the display at the existing reading, When hold is released, the display is updated and resumes counting.
- f. The attenuator and LPF coupling switch have no effect in input C.

### 3-4. Period Measurements

- a. Apply the signal to be measured to the input A BNC.
- b. Select the degree of resolution desired, using the gate time switch.
- c. Period is given by the display. The gate indicator lights while each measurement is in progress.
- d. attenuator, low pass filter, coupling switch application is same as frequency measurement mode.

### 3-5. Total Measurements

The totalize mode is used to count the total number of events occurring during a specific time period. Maximum frequency is 30 MHz.

- a. Set the totalize mode. Any gate and units setting is ignored.
- b. Apply the signal to be measured to input A , and then the counter display is the count continually. Maximum count is 999999999. if this is exceed the overflow message display as "OF"
- c. Low pass filter and attenuator, coupling switch application is same as frequency measurements mode.

#### **NOTE**

**THE HOLD SWITCH MAY BE USED TO BE LATCH THE DISPLAY. HOWEVER, THE COUNTER TO INCREMENT AND WHEN THE HOLD IS RELEASED, THE UPDATE COUNT IS DISPLAY.**

### 3-6. Time Interval Measurements(A→B)

In time interval mode, unit measures the elapsed time from a selected edge of the input A waveform to a selected edge of the input B waveform. For a stable reading, the two input signals should be related to each other such that this time interval remains reasonably constant from one measurement to the next. For example, two digital waveforms derived from the same clock would be suitable; two arbitrary frequencies from separate function generators would not.

- a. Connect the signal to be measured to the input A and input B.
- b. Set the T.I(A→B) of function switch. The switch label serves as a reminder that the measurement starts at the input A edge and stops at the input B edge.
- c. Select desired edge of each waveform using the input A, and input B slope switches push switch in for negative-going edge, leave out for positive-going edge.
- d. Set a trigger level control to preset (Push In). This ensures that both input A and input B are triggering at the same level (approximately the average) on their respective waveforms.
- e. Select the degree of resolution desired, using the gate time switch
- f. Time interval is given by the display, the gate indicator lights while each measurement is in progress, and the display is updated at the end of each measurement interval.
- g. Press the hold switch, "freezes" the display at the existing reading when hold is released, a new measurement begins (Gate Indicator Lights), but the display continues to hold the old reading until the new measurement is completed.



### 3-7. Frequency Ratio Measurements (A/B)

In this mode of operation, the counter displays the ratio of the frequency applied to input A to the frequency applied to input B. The input A frequency should preferably be equal to or greater than that of input B. And both frequencies must be within the limits given in the "SPECIFICATIONS" section. Frequency ratio is determined by counting the number of input A cycles occurring during a specified number of input B cycles (1.10.100.1000) and applying the result, with a proper decimal point, to the display.

- a. Connect signals to be measured to the input A and input B.

#### **NOTE**

**BOTH INPUTS MAY BE CONNECTED TO THE SAME SIGNAL FOR A RATIO OF 1.000000 AT THE GATE TIME 1 SEC. THE UNIT INDICATORS ARE OFF BECAUSE THE READING DISPLAYED IS RATIO.**

- b. Set the ratio A/B of function switch.
- c. Select the resolution desired using the gate time switches.
- d. Frequency ratio is given by the display the gate indicator lights while each measurement is in progress, and the display is updated at the end of each measurement interval.
- e. Press the hold switch "freezes" the display at the existing reading. When hold is released, a new measurement begins, but the display continues to hold the old reading until the new measurement is completed.

### 3-8. Use of RS-232C Serial Interfacing

#### 1) Hardware/Software Requirements

- . IBM PC/XT/AT or compatible computer
- . Microsoft Windows
- . Serial port for connection with counter

#### 2) Output Data Formats

(1) Baud rate : 9600BPS

1 start bit (0)

8 data bit

1 stop bit (1)

NONE PARITY

(2) To Frequency counter

Command	Parameter	Terminate Code
'H' : HOLD	'0' : OFF '1' : ON '2' : TOGGLE	CR (0DH)
'G' : GATE	'0' : 0.01 SEC '1' : 0.1 SEC '2' : 1 SEC '3' : 10 SEC	CR (0DH)
'D' : DATA REQUEST	DON'T CARE	CR(0DH)
'F' : FUNCTION SET	N*	CR(0DH)
'R' : REMOTE	'0' : OFF '1' : ON	CR(0DH)

N*=	0	1	2	3	4	5	6	7
1.5(3.0)GHz,U/C	FA	FB	FC	PERIOD	TOTAL	NC	RATIO	TI
150MHz,U/C	FA	FB	NC	PERIOD	TOTAL	NC	RATIO	TI
3.7GHz,F/C	FA	NC	FC	PERIOD	TOTAL	RPM	NC	NC
1.5(3.0)GHz,F/C	FA	NC	FC	PERIOD	TOTAL	RPM	NC	NC
150MHz,F/C	FA	FB	NC	PERIOD	TOTAL	RPM	NC	NC

(3) From Frequency counter

DATA

10BYTES include dp

UNIT

4bytes CR

### 3) Installing Program and using the software

Refer to "Readme" file on Software diskette supplied with unit.

## **4. MAINTENANCE**

### **CAUTION**

**IT IS ESSENTIAL FOR SAFETY TO PROPERLY MAINTAIN AND SERVICE THIS INSTRUMENT**

### **WARNING**

**VOLTAGES WITHIN THIS INSTRUMENT ARE SUFFICIENTLY HIGH TO ENDANGER LIFE. COVERS MUST NOT BE REMOVED EXCEPT BY PERSONS QUALIFIED AND AUTHORIZED TO DO SO AND THESE PERSONS SHOULD ALWAYS TAKE EXTREME CARE ONCE THE COVERS HAVE BEEN REMOVED.**

#### **4-1. Fuse Replacement**

- Disconnect and remove all connections from any live power source.
- Unscrew fuse holder by screw driver.
- Locate the defective fuse and remove it by gently pulling-out.
- Install a new fuse of the SAME SIZE AND RATING.
- Screwing fuse holder.

### **CAUTION**

**MAKE SURE THAT THE RATED AND SPECIFIED FUSES ARE USED FOR REPLACEMENT.**

#### **4-2. Adjustment And Calibration**

It is recommendable to regularly adjust and calibrate this instrument. Qualified and authorized personnel only should execute performance and procedures

#### **4-3. Cleaning and decontamination**

The instrument can be cleaned with a soft clean cloth to remove any oil, grease or grime. Never use liquid solvents or detergents. If the instrument gets wet for any reason, dry the instrument using low-pressure clean air at less than 25 PSI. Use care and caution around the window cover areas where water or air could enter into the instrument while drying.

## 5. OTHERS

### 5-1. BNC Cable Considerations

Accuracy of radio frequency measurements can be affected by connections between signal source and counter. Main considerations are standing waves and shunt cable capacitance.

Standing wave is usually present due to reflections when a transmission line is not terminated in its characteristic impedance. These standing waves may cause damage to the signal source or produce inaccurate measurements, and their effects increase as cable length reaches one-fourth of the wavelength for the frequency being measure. Standing wave can be minimized by keeping cable lengths short, and more important, providing a proper termination.

The cable's characteristic impedance and the terminating impedance should match the source impedance. For example, for a source impedance of  $50\ \Omega$ , use  $50\ \Omega$  coaxial cable terminated with a  $50\ \Omega$  resistive load.

Use DC blocking capacitor in situations where bias voltage or other DC voltages could be affected by the termination resistor. Shunt cable capacitance, which can cause undesirable signal attenuation, increases with increased cable length. It is recommended that for radio frequency measurements, the cable be no longer than three feet (90 cm), to keep shunt capacitance within acceptable limit.

In  $50\ \Omega$  systems the internal  $50\ \Omega$  input termination of the input B. BNC minimizes reflections and the resulting standing waves. Thus, the need for an external termination is eliminated. Also, shunt capacitance has a much lesser effect at this BNC then at the input A, and the above restriction on cable length is reduced. However, prescale measurements must always be taken from a  $50\ \Omega$  point in the circuit under test.

### 5-2. Use of Attenuator Probes

Input A resistance ( $1\ \text{M}\Omega$ ) and input capacitance ( $< 40\ \text{pF}$ ) are independent of the ATT switch. To decrease loading, a high impedance oscilloscope probe such as the following may be used with input A. Use the probe in the x 10 position whenever possible for less circuit loading.

#### NOTE

DO NOT USE A 10:1 PROBE WITH THE INPUT C, THE PROBE IS DESIGNED FOR 10:1 ATTENUATOR WITH A COUNTER INPUT RESISTANCE OF  $1\ \text{M}\Omega$ . THE  $50\ \Omega$  TERMINATION OF THE INPUT C WOULD RESULT IN UNACCEPTABLY HIGH ATTENUATION.

### 5-3. Line Frequency Measurements

Use of the attenuator, low pass filter, and/or x10 probe is advisable when measuring line frequency because the high amplitude signal and noise can cause wrong counting.

#### **WARNING**

**USE CAUTION IN MEASURING THE LINE FREQUENCY OF AN AC OUTLET. USING THE PROBE TIP ONLY, MEASURE BOTH SIDES OF THE LINE. THE GROUND SIDE WILL GIVE A ZERO READING AND THE HOT SIDE WILL PROVIDE THE DESIRED MEASUREMENT. DO NOT USE THE "GROUND "LEAD OF THE PROBE. REMEMBER THAT THE CHASSIS OF THE COUNTER AND THE "GROUND" LEAD OF THE PROBE ARE ALREADY AT EARTH GROUND (VIA THE 3-WIRE POWER CORD OF THE INSTRUMENT). TOUCHING THE "GROUND "LEAD TO THE 'HOT" SIDE OF THE LINE WOULD PLACE A DIRECT SHORT ON THE POWER LINE THROUGH THE PROBE CABLE, RESULTING IN POSSIBLE INJURY AND DAMAGE TO THE PROBE CABLE.**



### **Limited One-Year Warranty**

B&K Precision Corp. warrants to the original purchaser that its product and the component parts thereof, will be free from defects in workmanship and materials for a period of one year from the date of purchase.

B&K Precision Corp. will, without charge, repair or replace, at its' option, defective product or component parts. Returned product must be accompanied by proof of the purchase date in the form a sales receipt.

To obtain warranty coverage in the U.S.A., this product must be registered by completing and mailing the enclosed warranty card to B&K Precision Corp., 22820 Savi Ranch Parkway, Yorba Linda, CA 92887 within fifteen (15) days from proof of purchase.

Exclusions: This warranty does not apply in the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs. It is void if the serial number is alternated, defaced or removed.

B&K Precision Corp. shall not be liable for any consequential damages, including without limitation damages resulting from loss of use. Some states do not allow limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific rights and you may have other rights, which vary from state-to-state.



**Model Number:** \_\_\_\_\_

**Date Purchased:** \_\_\_\_\_

### **Service Information**

**Warranty Service:** Please return the product in the original packaging with proof of purchase to the below address. Clearly state in writing the performance problem and return any leads, connectors and accessories that you are using with the device.

**Non-Warranty Service:** Return the product in the original packaging to the below address. Clearly state in writing the performance problem and return any leads, connectors and accessories that you are using with the device. Customers not on open account must include payment in the form of a money order or credit card. For the most current repair charges contact the factory before shipping the product.

Return all merchandise to B&K Precision Corp. with pre-paid shipping. The flat-rate repair charge includes return shipping to locations in North America. For overnight shipments and non-North America shipping fees contact B&K Precision Corp..

B&K Precision Corp.

22820 Savi Ranch Parkway

Yorba Linda, CA 92887

Phone: 714- 921-9095

Facsimile: 714-921-6422

Email: [service@bkprecision.com](mailto:service@bkprecision.com)

Include with the instrument your complete return shipping address, contact name, phone number and description of problem.

---

PN: 481-542-9-001  
Printed in Korea  
©2004 B&K Precision Corp.  
V042111

22820 Savi Ranch Parkway  
Yorba Linda, CA 92887  
USA  
TEL: 714-921-9095  
FAX: 714-921-6422  
[www.bkprecision.com](http://www.bkprecision.com)